 


 
M 2032  
M 1432  
M 2052  
M 2152  
M 2192  
M 1452

TV

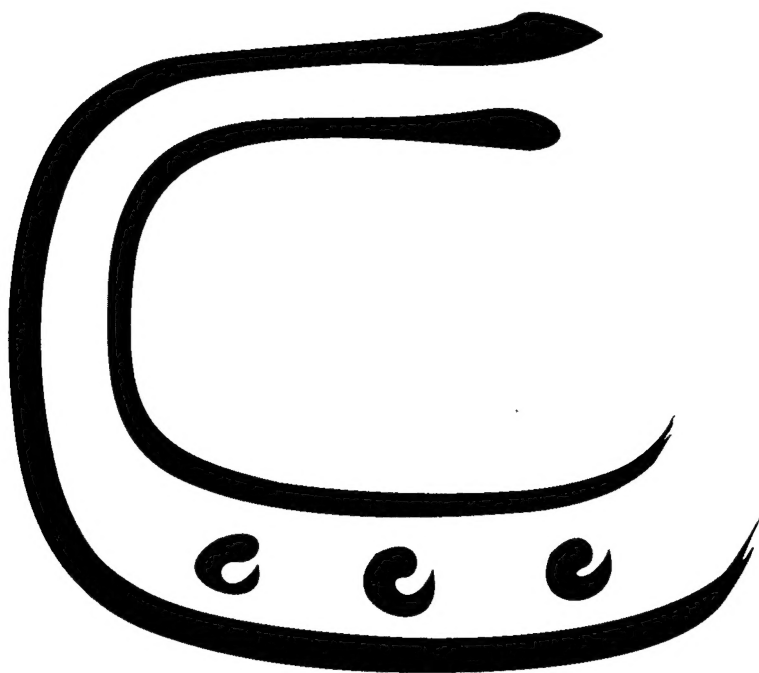

# Installation

## Action :

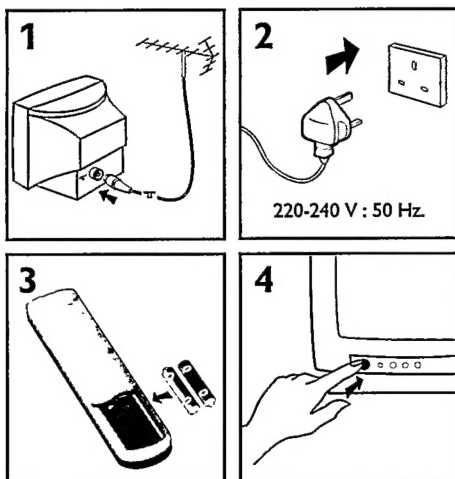

## Result. Comments.

- 1 Small-screen TV sets are supplied with an indoor antenna, which under certain reception conditions may not be acceptable. You may be able to improve reception by rotating the antenna or if reception remains poor the use of an external antenna.
- 2 Plug your television into mains supply (220-240 V / 50 Hz).
- 3 Open the battery compartment as indicated by the arrow. Insert the two R6 type batteries (supplied) making sure that they are the right way round.
- 4 To switch on the TV set, press the on/off button. If the TV set remains in standby mode : press the - P + keys on the remote control.

# Channel search

## Press key(s) :



- 1   
Press the two keys at the same time.

- 2   
System selection.

- 3   
Channel search.

- 4   
Choose the Programme Number.

 
- 5   
Press the two keys at the same time.



Teletext-stereo version

 
## Result :

The **INSTALLATION** menu appears on the screen.

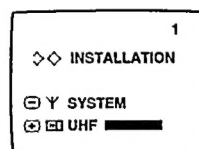 


*Option only available on certain versions.*

Press key until required system appears : **FRANCE** (SECAM L L') or **EUROPE** (PAL BG, SECAM BG).

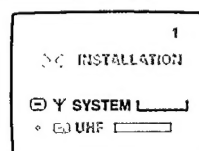 


**SEARCHING** appears, the search bar shows progress. When a programme is found, the number flashes.

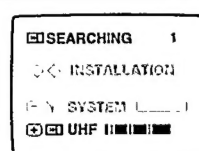

 
Enter the programme number you want.

*Note: Programme number 0 cannot be used.*

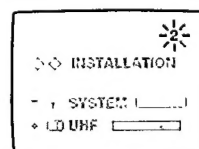



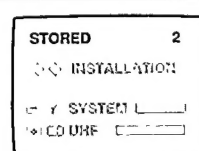 



 







 


 
 




 
**STORED** appears, the programme is stored.

Repeat steps 3 to 5 to store each programme.



To leave the **INSTALLATION** menu press

# Using the remote control


Press :	Result :
 <b>Standby</b>	The TV set switches off, the light is red. To turn on the TV set, press the <b>- P +</b> keys.
 <b>Programme selection</b>	The number is displayed on the screen, the previous (-) or next (+) programme is selected.
 <b>Numbered keys</b>	The number is displayed, the programme is selected. For a 2-digit number, the second digit must be added before the line disappears.
 <b>Volume</b>	Volume is changed.
 <b>Mute</b>	Switches sound on or off.
 <b>Menu</b>	By pressing the menu button several times the following items can be adjusted:  (volume),  (balance) (only on versions with stereo),  (brightness),  (contrast),  (colour) and  (sleep timer).
 <b>Menu adjustment</b>	This modifies the menu item selected. Using the sleep timer function (  ) , you can adjust the time after which the TV set will automatically switch into standby mode (up to 90 minutes).
 <b>Storing of adjustments</b>	Firstly, display a menu :  ,  ,  ,  , or  , then press the two   keys. <b>STORED</b> appears. All menu adjustments are stored, except for the sleep timer.
 <b>Screen info</b>	To turn the display of the programme number and remaining time on the sleep timer on or off.
 <b>Sound mode</b>	<i>Only operates in appliances with stereo.</i> Alternates between <b>STEREO</b> and <b>MONO</b> or language <b>I</b> and <b>II</b> for bilingual programmes.

## Other functions

### • Teletext

*Option only available on certain versions.*

#### Teletext request.

Press  to turn teletext on or off.

A main index appears with the list of items to which you have access.

*If the channel does not have teletext, the screen remains black.*

#### Selecting a page.

Enter the number of the page you wish to consult using the numbered keys **0** to **9** (always three digits). The page number appears in the top left-hand corner, the counter searches then the page is displayed.

You may also select the previous and next page using the **- P +** keys.


*If the counter continues searching or if **P?..** appears, the page is not available.*

#### Stopping the sequence of sub-pages.

Certain pages contain sub-pages which follow on automatically.

Press  to stop / resume the sequence.

#### Enlarging a page.

Press  several times to enlarge the page.

#### Hidden information.

Press **?** to reveal hidden information (in games, etc.).

Pressing the button a second time will again hide the information.

### • TV set keys

The TV set has 3 keys : A **Menu** key and the **-** and **+** keys which are used to select programs or adjust menus.

### • Connecting other appliances

Use the euroconnector socket located at the back of the set.

To reproduce the picture from connected appliances, press the **0** key (**AV** appears on the screen).

### • Tips

See the last page of this user manual.

## Tips

---

**Installation :** To avoid any dangerous situations and operating faults, do not place anything on the TV set and leave a space of at least 5 cm around the appliance.

**Poor picture quality:** The proximity of mountains or high buildings may be responsible for ghost pictures, echoes or shadows. If this is the case, change the orientation of the antenna.

Have you remembered to connect the aerial socket ?

**Standby :** To save energy and preserve optimum picture quality (by demagnetising the tube), you are advised to switch off your TV set using the on/off button at the front of the TV set.

**Recycling directive :** To minimise harm to the environment, the batteries supplied with the appliance do not contain mercury or nickel cadmium. When disposing of batteries, if possible use recycling means available to you (contact your dealer).

Your TV set makes use of reusable and recyclable materials. To minimise harm to the environment, specialist companies will recover used TV sets for dismantling and collection of reusable materials.

*In the event of a breakdown, under no circumstances attempt to repair the TV set yourself, contact your dealer.*

---

